



Thank you for renewing your **gplink**<sup>®</sup> subscription!

We would like to take this opportunity to remind you to replace the batteries in your various alarms & sensors. Please use the enclosed batteries and refer to the instructions below as needed.

### Smoke Detector Battery Replacement

1. Remove the device from the mounting plate by twisting counterclockwise 1/8 turn.
2. Open battery cover lever and replace 9V battery. Close cover
3. Depress test button on front of smoke detector. An audible alarm should sound.
4. Replace smoke detector on mounting plate.



### High Water Alarm Battery Replacement

1. Remove the high water alarm cover by unscrewing #1 Phillips screw on bottom of cover and lifting cover (see arrow)
2. Carefully remove 3V CR2 battery from holder. Replace with new battery.
3. Replace cover and screw. Test device by placing water sensor in cup of 'hard' water. A red light will flash on the device when activated.



### AC Power Alarm Battery Replacement

1. Remove the AC Power alarm cover by unscrewing #1 Phillips screw on bottom of cover and lifting cover (see arrow)
2. Carefully remove 3V CR2 battery from holder. Replace with new battery.
3. Replace cover and screw. Test device by plugging adaptor into energized AC outlet. A red light will flash on the device when activated.

